

Adapter Sleeve Disassembling

- Mark the adapter sleeve position so it can be assembled again in the same position.
- Lift the lock washer catch.
- Untighten the nut for some turns using a hook spanner, but do not remove it.
- With a cup like tool leaned on the sleeve nut punch the tool center sometimes to loosen the sleeve from the bearing. (when the bearing is supported)
- When the former procedure is impossible, a withdrawal ring with impact shape can be used, because it can be placed on the bearing opposite side to receive the punches. The support in the internal ring will make the bearing loosen from the sleeve.

