


# Withdrawal Sleeve Disassembling with Hook Spanner

- Use the nut and the hook spanner according to the withdrawal sleeve thread.  
Example: AHX320 Sleeve, KM 22 withdrawal nut and HN 22 Hook Spanner
- Lubricate the thread and the nut face turned to the bearing with molybdenum bi-sulfide paste or another similar. Tap the nut with the hook spanner until the bearing is free.

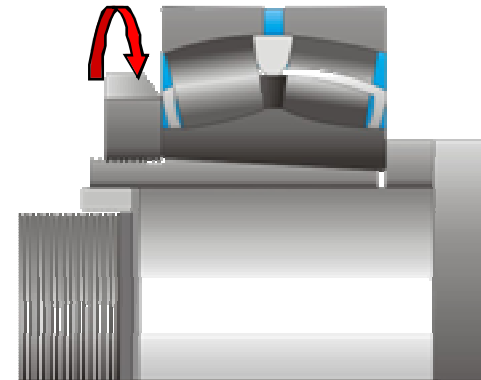

## Withdrawal Sleeve Disassembling with Hook Spanner

If the withdrawal sleeve is projecting from the shaft, we must insert a support disc in the bore with the bore nominal diameter to stop the sleeve deformation.

